


Quick Operations Instructions for the VFD Controller ACS355 ABB Control

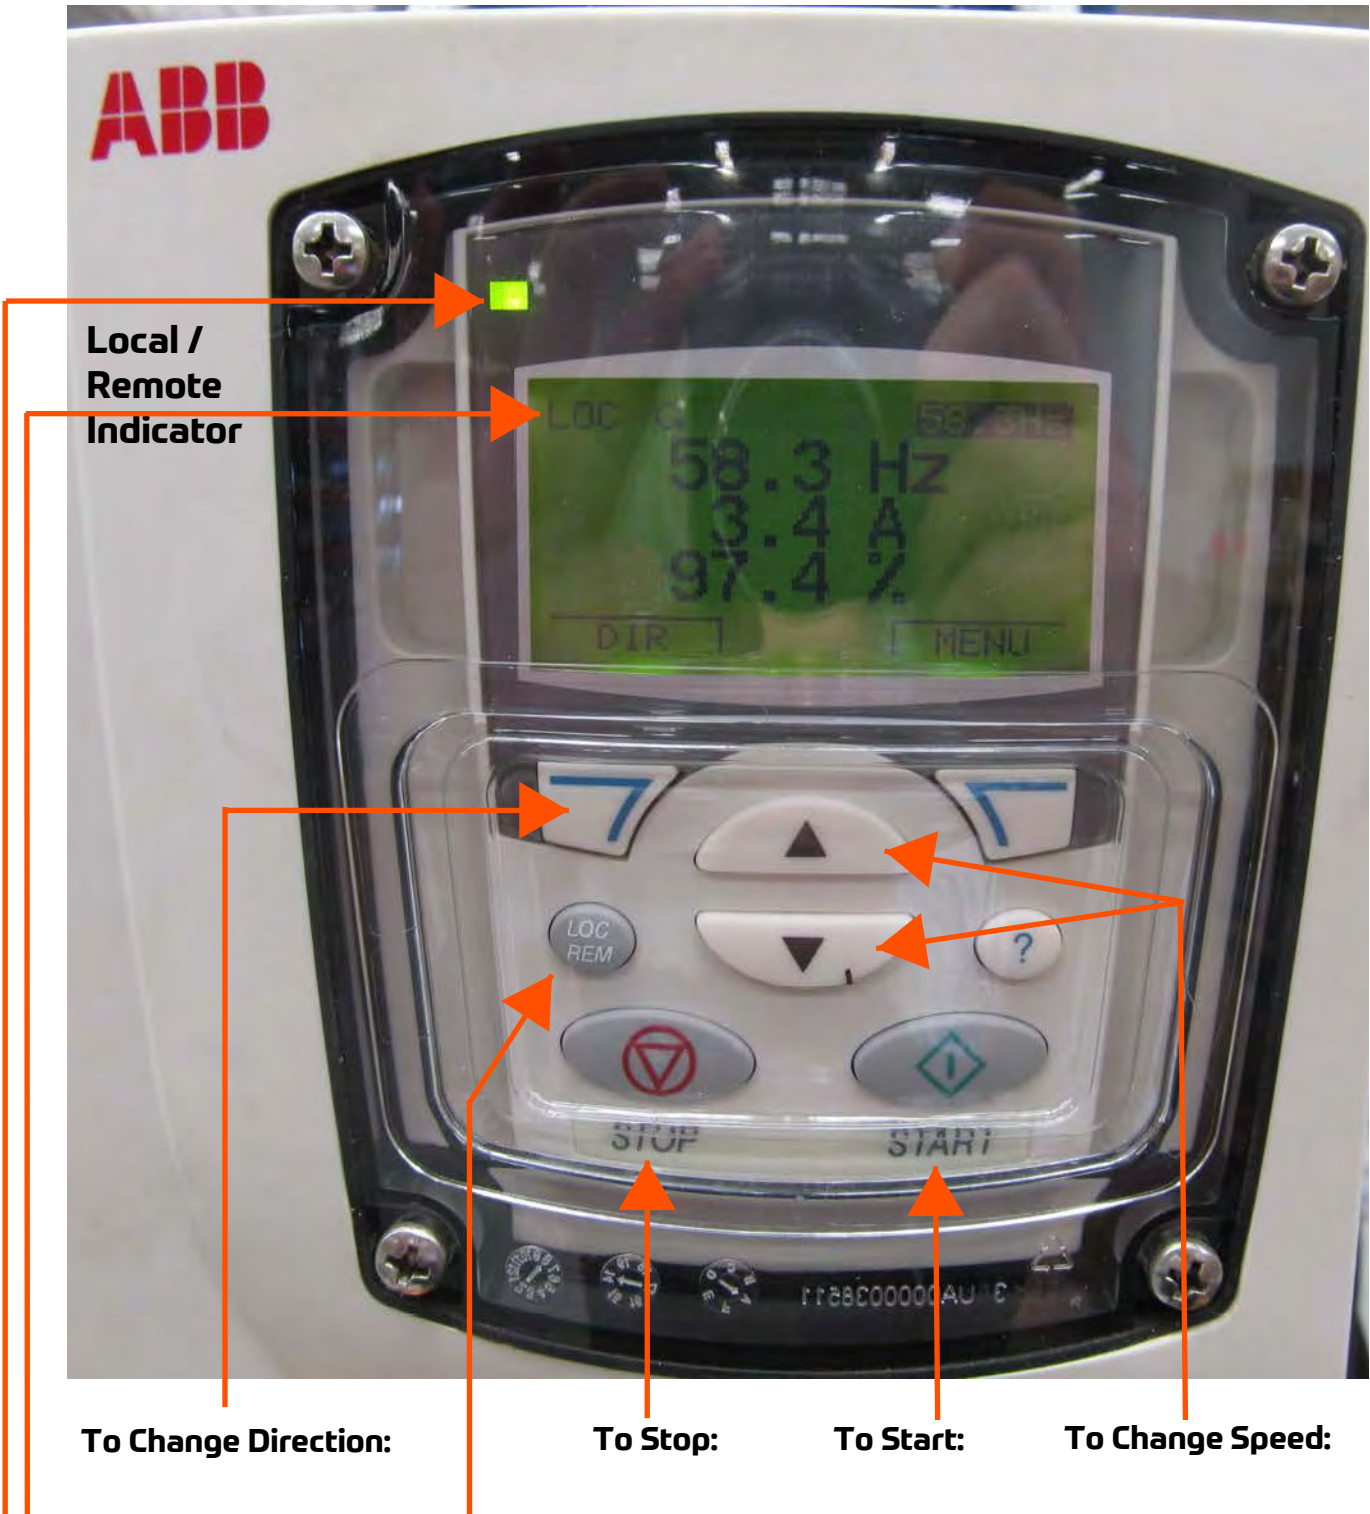

Local / Remote - Must be in "Local" for the controller to operate the fan.

Look for "LOC" or "REM" if the upper left hand corner of the display.

The green LED indicator is solid whenever there is no alarm that has not been cleared. If the LED is flashing green or red it means there is an alarm or fault that has not been cleared. The fan may still operate, depending on the alarm or fault, but the alarm or fault should be investigated and cleared immediately.